SIMORE

 
Triple-SIM Card - Instruction

Features:

- 1. Three SIM Cards in one iPhone, single standby 2. Auto-switch among the three SIM Cards
- 3. Enable to edit switching time


Installation:


1. Place Micro SIM into SIM3 sim slot, then place normal SIM into SIM2 sim slot






  2. Put the Nano adapter into the metal Nano SIM holder

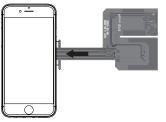





3. Put nano SIM on the nano adapter

5. Insert into side slot of iPhone



your phone, then put the protective case on.

6. Fold the other side of the SIM adapter to the back of



1. Enter Setting - Phone - SIM Applications, Menu as figure1

Switch Number Auto/SW Setup

figure1

Switch Number *Auto/SW Setup figure2 SIM1 NO.

SIM2 NO. SIM3 NO. SIM1 Time:03 SIM2 Time:03 SIM3 Time:03

can be switched automatically into SIM1or SIM2 or SIM3 by timer switch. (As figure2) 3. Find the "Setup" menu option

· Select "Setup" menu to enter

SIM1 NO.: Set the phone number

SIM2 NO.: Set the phone number

which SIM1 stands for

which SIM2 stands for

to switch the time.

the following interface:

1."Switch Number": Choose the

Standby SIM card by manual

setting, SIM card options can

be SIM1 or SIM2 or SIM3. 2."Auto/SW": Standby SIM card

Notice:

Please restart the mobile phone if there is no signal (network) after switching.

Accessories:

Nano SIM holder x1

More information on : WWW.SIMORE.COM

SIM3 NO.: Set the phone number which SIM3 stands for

*The default number is the one which is inserted into the phone, regarded as SIM1, others as SIM2, SIM3

SIM1 Time: To set up standby time of SIM1, once time is

SIM2 Time: To set up standby time of SIM2, once time is

SIM3 Time: To set up standby time of SIM3, once time is

Note: if there are three SIM cards in the mobile phone, the automatic switching sequence is: SIM1-->> SIM2-->>SIM3

*The default switching time is 3 minutes. * The switching time can be 0 ~99 minutes.

up, it will switch into SIM2 or SIM3 automatically.

up, it will switch into SIM1 or SIM3 automatically.

up, it will switch into SIM1 or SIM2 automatically.